



**NO ACCESS
FOR
UNAUTHO-
RISED
PERSONNEL**



**MAXIMUM
SPEED LIMIT**



**DO NOT USE
OPEN
FLAMES**



**NO PEDESTRIANS
CROSSING**



**FORKLIFTS
OPERATING**



**DO NOT DEPOSIT
MATERIAL IN
FRONT OF DOORS
AND EXITS**



**OVERHEAD
CRANE AND
LIFT
OPERATING**



**SAFETY
SHOES
MUST BE
WORN**



**FALLING
OBJECTS**



**HELMET
MUST BE
WORN**




**TRUCKS
OPERATING**



**HIGH
VISIBILITY
VEST**

SAFETY REGULATIONS FOR DRIVERS OF FOREIGN VEHICLES

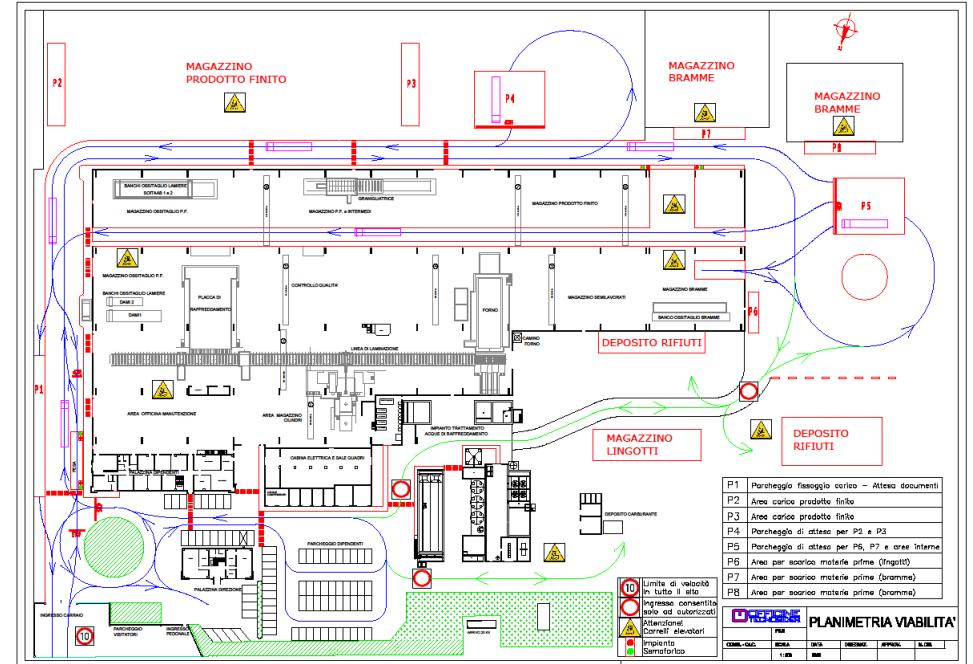

Officine Tecnosider Srl - Traffic rules
Via Jacopo Linussio 1 – 33058 San Giorgio di Nogaro (UD)

Trucks drivers must comply scrupulously the following company disposals about safety:

IT IS MANDATORY TO:

- Apply the provisions of the Highway Code in force in Italy.
- Fix the cargo safely, in compliance with the provisions for international road transportation, parking at P1.
- Unhook the straps at P5 for slabs or at P6 for steel ingots.
- Turn off CB device.
- Follow the paths indicated in Logistic Office and wait your turn inside of your truck cabin.
- Access to loading/unloading area with your truck ONLY when called by the Storeman and follow his instructions.
- At your turn of loading sheets / unloading materials or steel ingots, get out of the truck wearing safety helmet, high visibility vest and security shoes and keep awaiting where indicated by the storeman during all working operations with cranes or forklifts.
- For unloading slabs with forklift, coordinate with the Storeman and remain inside of your truck cabin.
- Pay attention to suspended loads and possible falling objects.
- Pay attention to forklifts and trucks operating.
- Respect signs, traffic lights and transits predisposed.
- Respect speed limit (10 km/h). Proceed at walking speed near the exit/entrance of the warehouse, in the places of passage intersections and in all conditions of poor visibility or potential interference with vehicles and/or pedestrians.
- Not stand on yard and on plant further loading/unloading operations.
- Use only the bathroom available to drivers at Logistic Office.
- Discharge any passengers at Logistic Office.
- Use appropriate containers for waste.
- Leave completely free the firefighting devices and emergency exits.
- Use your own tools (scales, etc.), if necessary for fixing the cargo, conformed to European legislation.

IT IS FORBIDDEN TO:

- Walk into the plant, except for Logistic Office.
- Stop along viability or in unauthorized areas.
- Carry passengers on the vehicle (they must remain in Logistic Office).
- Get close to the stocked material (slabs, plates, etc.).
- Get close to loading/unloading area during operations.
- Interfer with plant activities and with loading/unloading operations.
- Ask for company employees' assistance for operations not connected with loading/unloading activities.
- Use company tools.
- Stand under suspended loads or within forklifts area.
- Make reversing, unless authorized.
- Drink alcohol, smoke or use open flames.
- Get away from your vehicle.
- Run.
- Leave the engine on.
- Do maintenance operations on the vehicle or use dangerous equipment (for example chainsaw for wood).
- Clutter or deposit material in the vicinity of the exit routes.
- Soil or leave garbage.
- Camp out.

IN CASE OF EMERGENCY:

- Avoid personal initiatives.
- Get behind the driver's seat of your own vehicle.
- Keep awaiting for specific instructions by plant's employees.

Any violation of the disposals listed above will result in a formal warning to the driver's company, resulting in his immediate expulsion and denial of access.